

EVVA
access to security

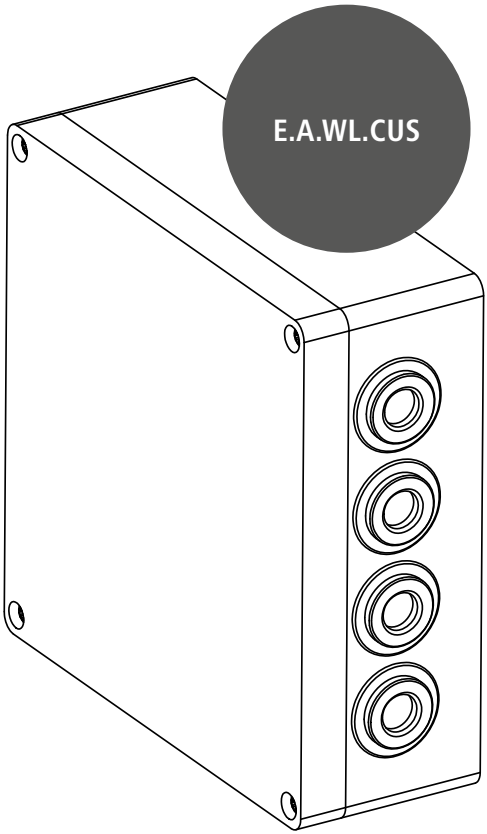




AirKey

Montageanleitung | Assembly manual | Montagehandleiding
Instructions de montage | Istruzioni di montaggio | Montážní návody
Montážne návody | Instrukcje montażu | Installationsanvisningar

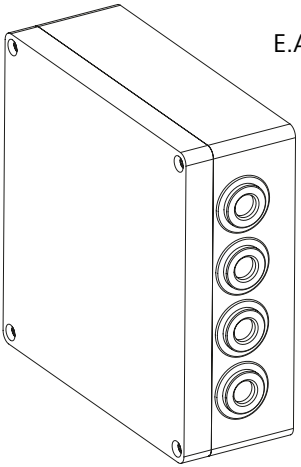

E.A.WL.CUS


IP54






E.TE.ZU.CU6

Option

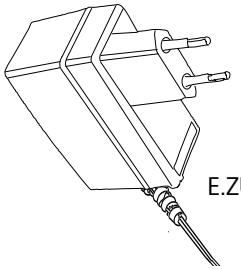


E.ZU.WL.NT






E.A.WL._ _

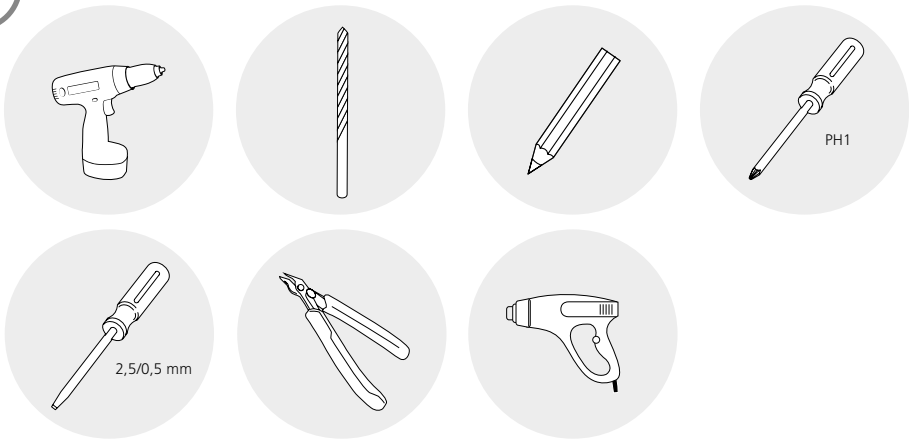


4×




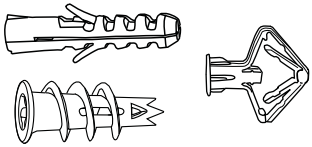


Option

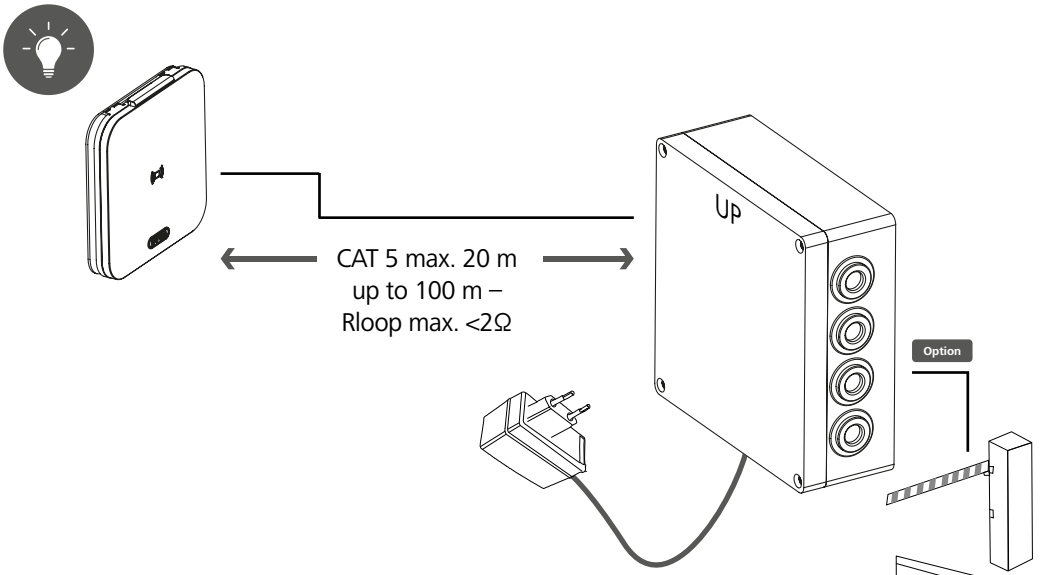

Up
CAT 5 max. 20 m
up to 100 m –
Rloop max. <2Ω
Option

1

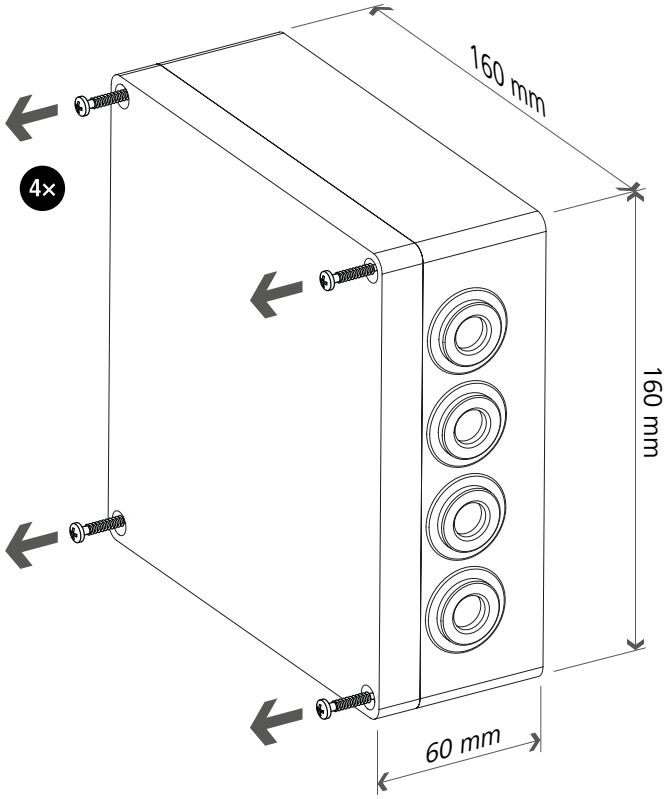

4×
160 mm
160 mm
60 mm

2

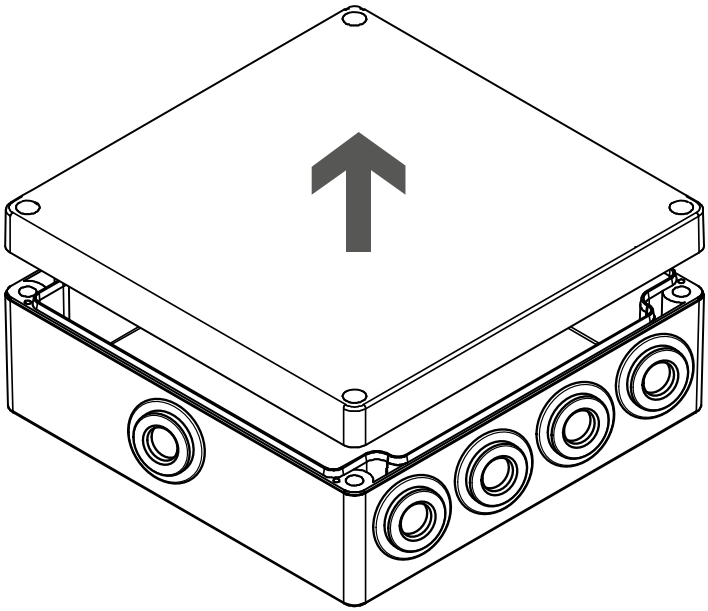


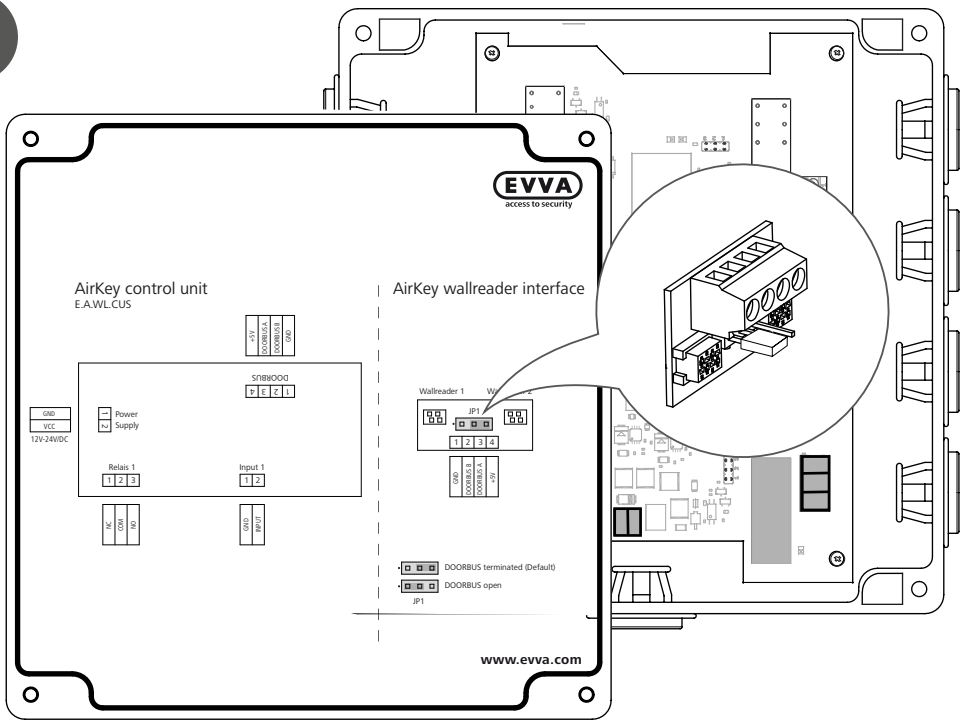

EVVA
access to security
AirKey control unit
E.A.WL.CUS
AirKey wallreader interface
Power Supply
12V-24VDC
Relais 1
Input 1
Wallreader 1
JP1
DOORBUS terminated (Default)
DOORBUS open
www.evva.com


3

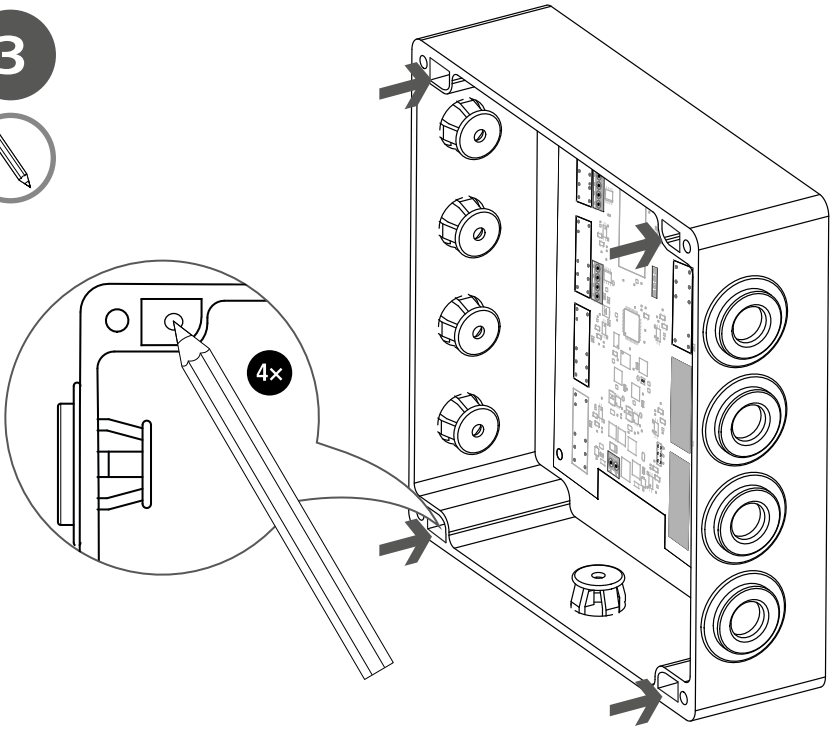


4

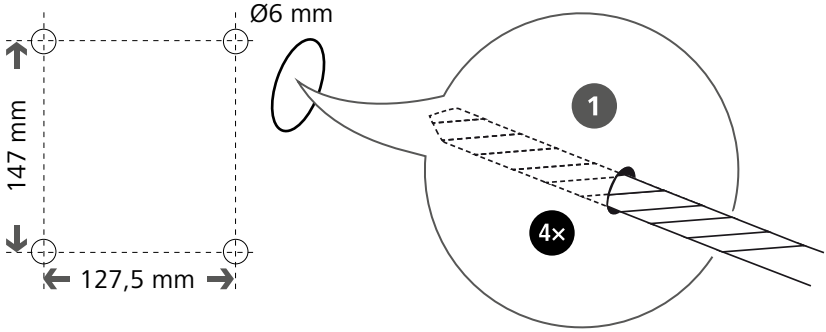

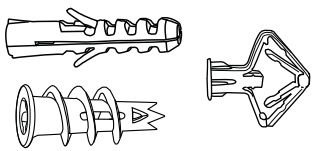


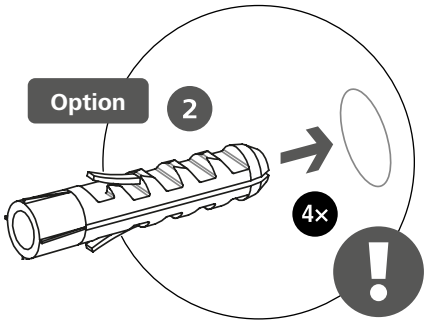


5

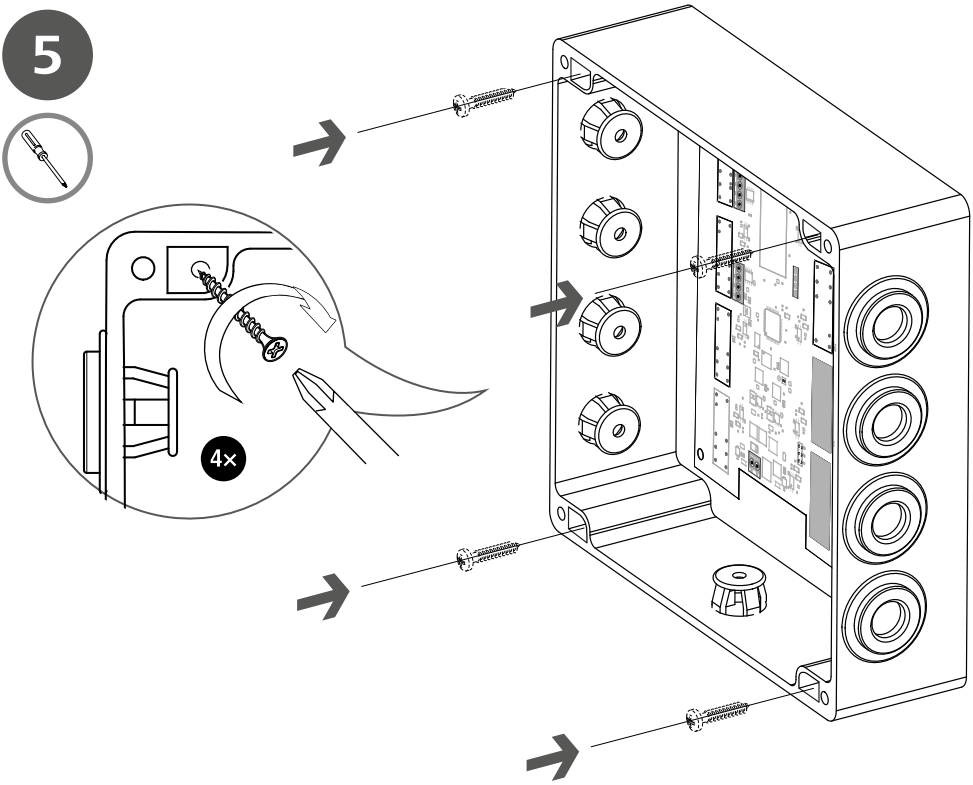



6

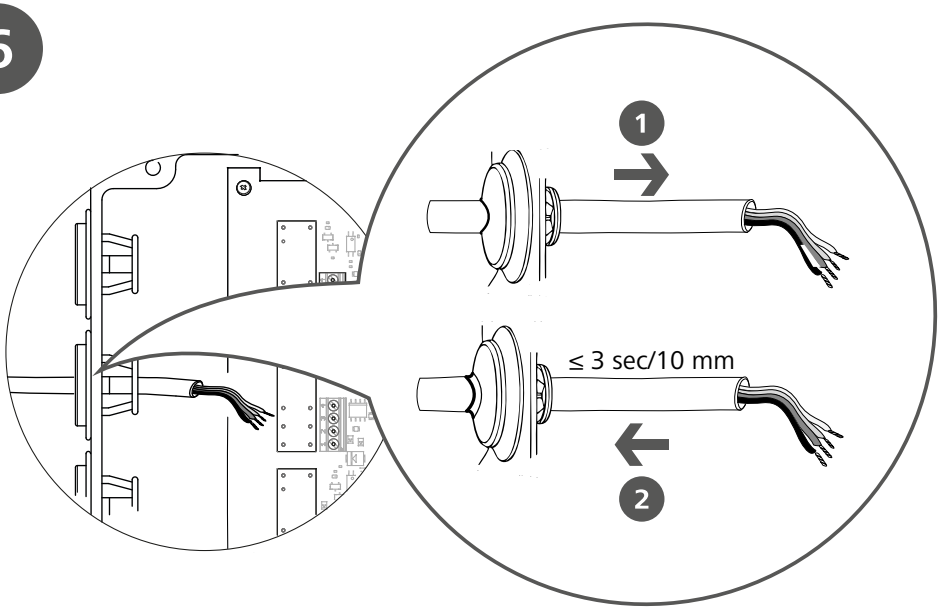


7

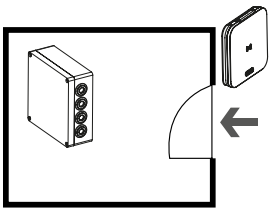


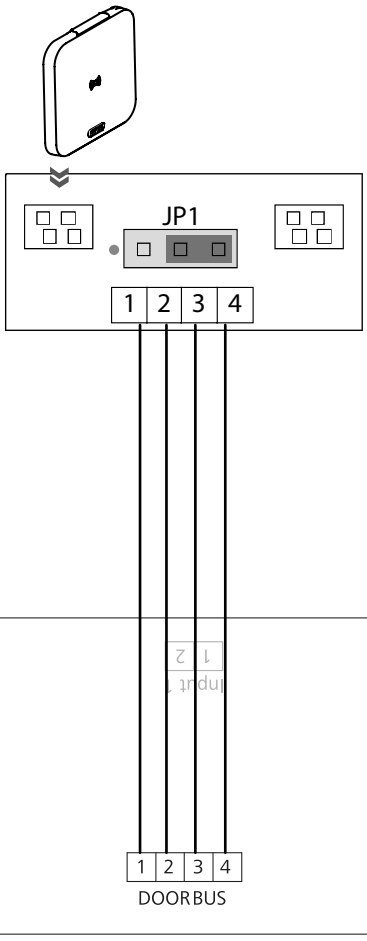

JP1
1 2 3 4
NO
COM
NC
Relais 1
12V-24V/DC
GND
1 2 3 4
DOOR BUS
AirKey control unit

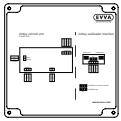


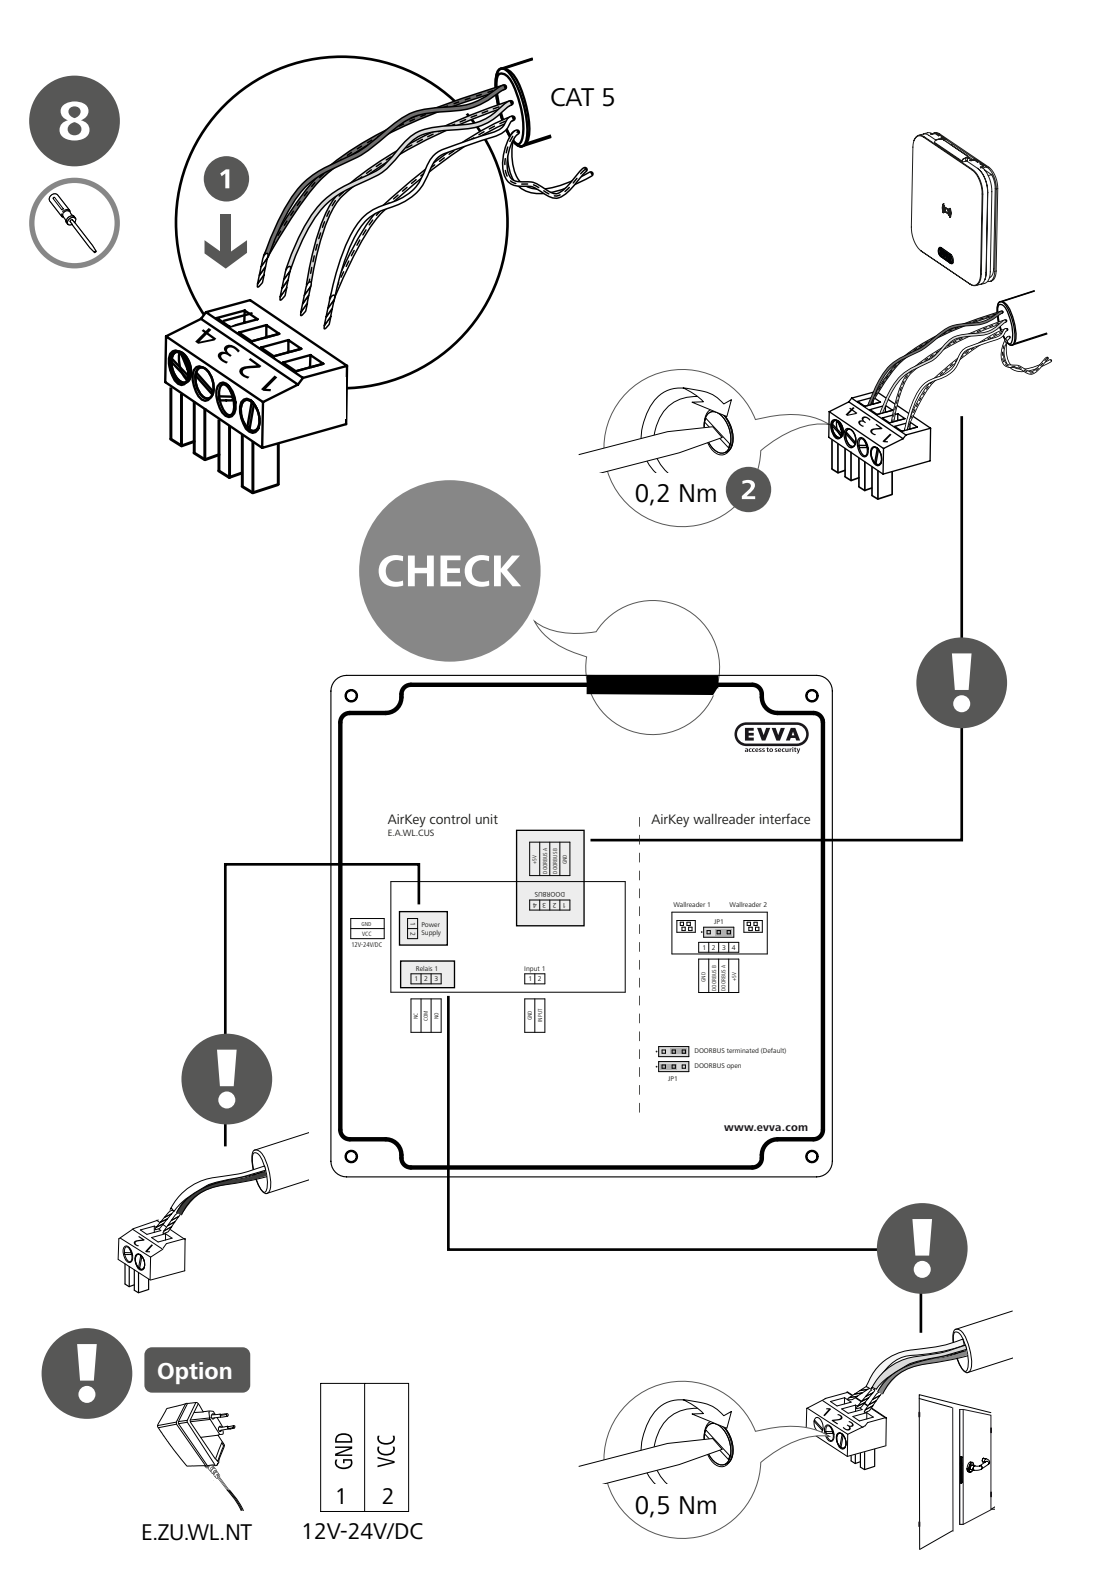

8
CAT 5
1
1 2 3 4
0,2 Nm
2
CHECK
EVVA
access to security
AirKey control unit
E.A.WL.CUS
AirKey wallreader interface
DOORBUS
Power Supply
GND
VCC
12V-24V/DC
Relais 1
Input 1
NC
COM
NO
Wallreader 1
Wallreader 2
JP1
DOORBUS terminated (Default)
DOORBUS open
JP1
www.evva.com
Option
GND
VCC
1
2
E.ZU.WL.NT
12V-24V/DC
0,5 Nm

Option ≥ 3m

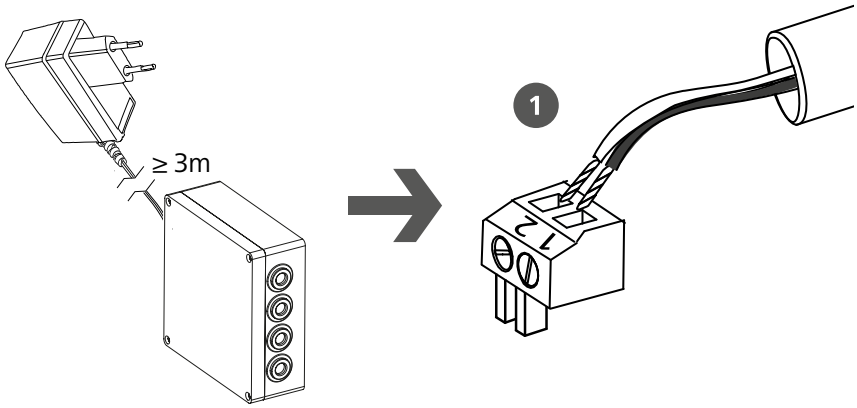


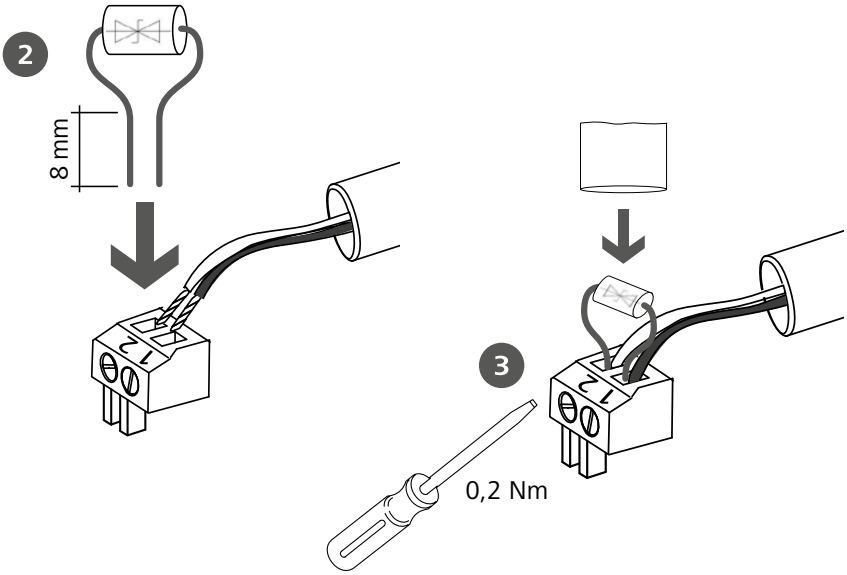

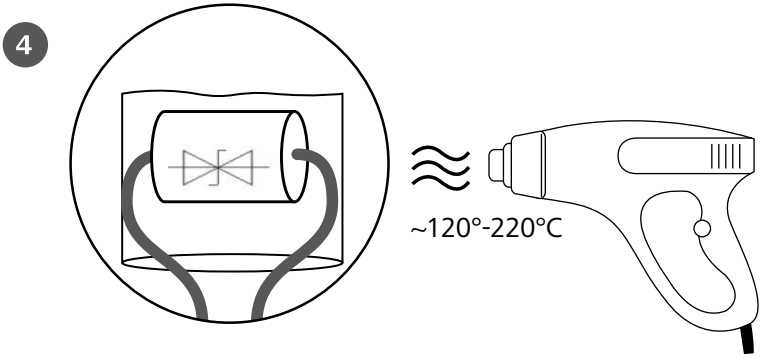


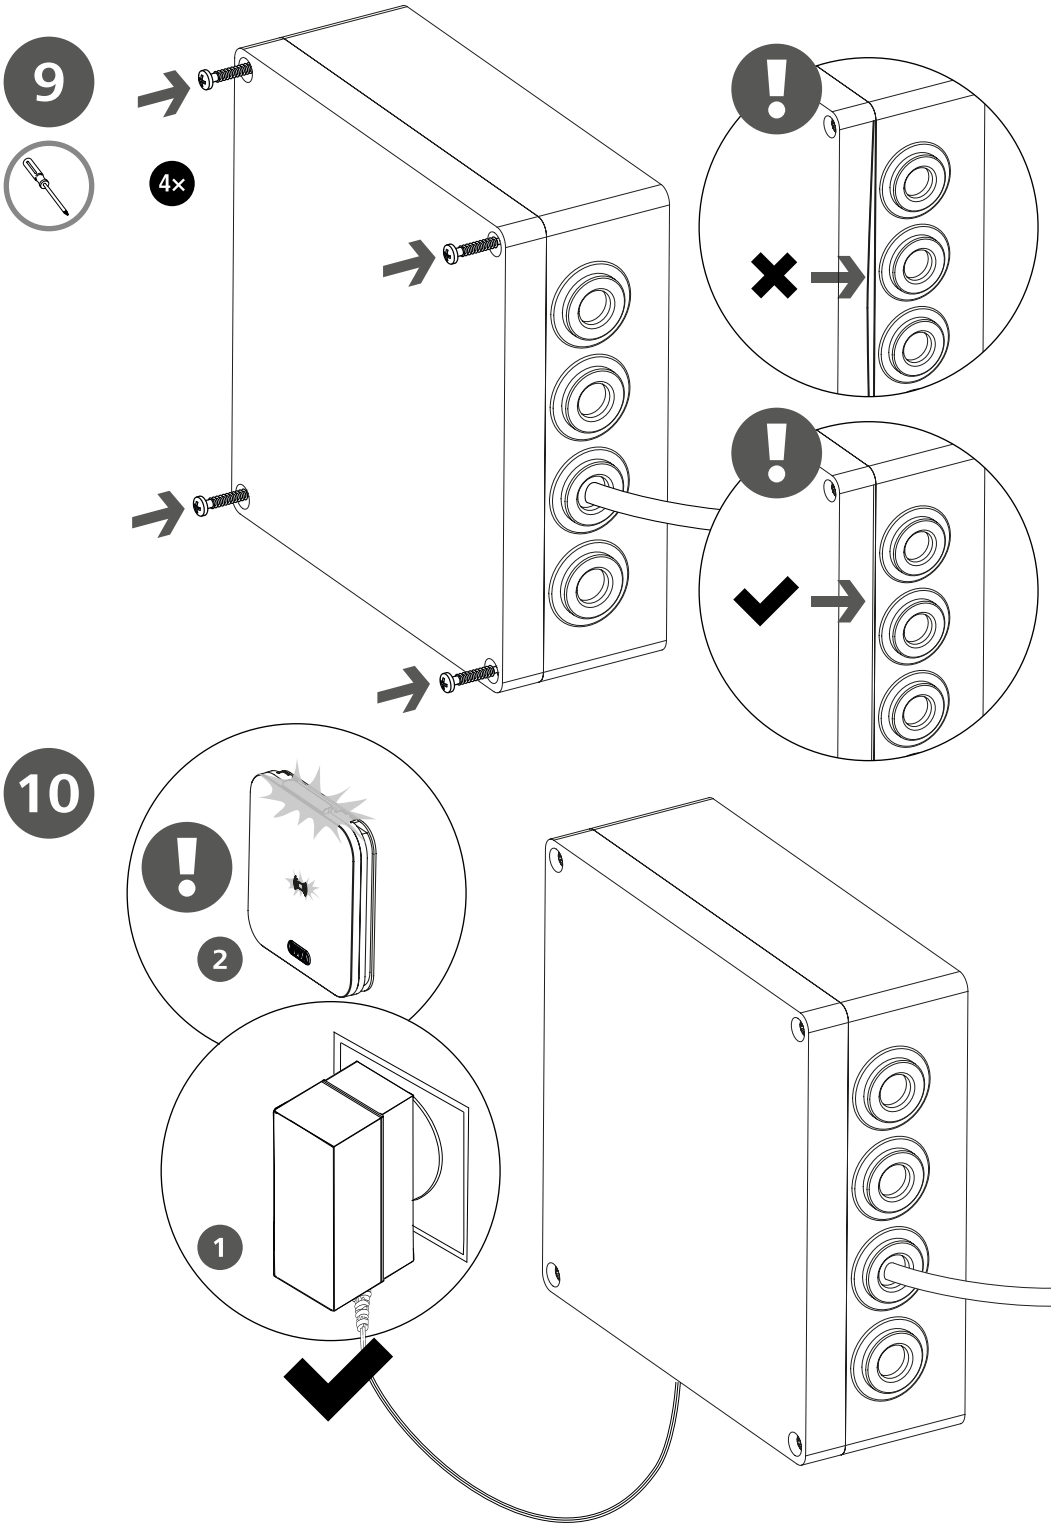
9
4×
10
2
1


01 CONTROL UNIT WITH DC LOW CURRENT ELECTRIC STRIKE

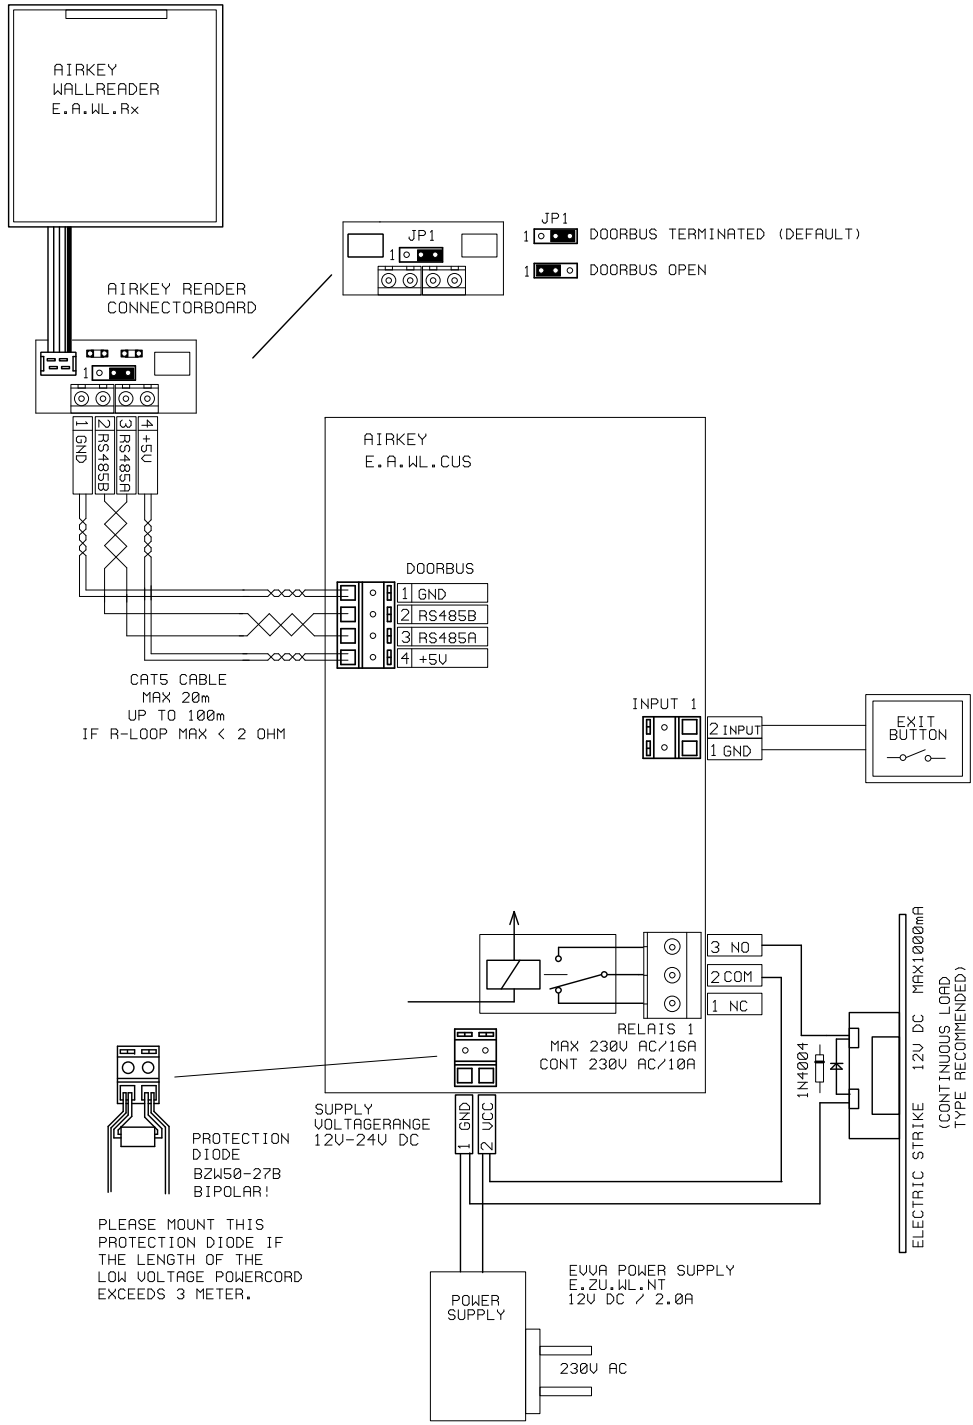

02 CONTROL UNIT WITH DC HIGH CURRENT ELECTRIC STRIKE

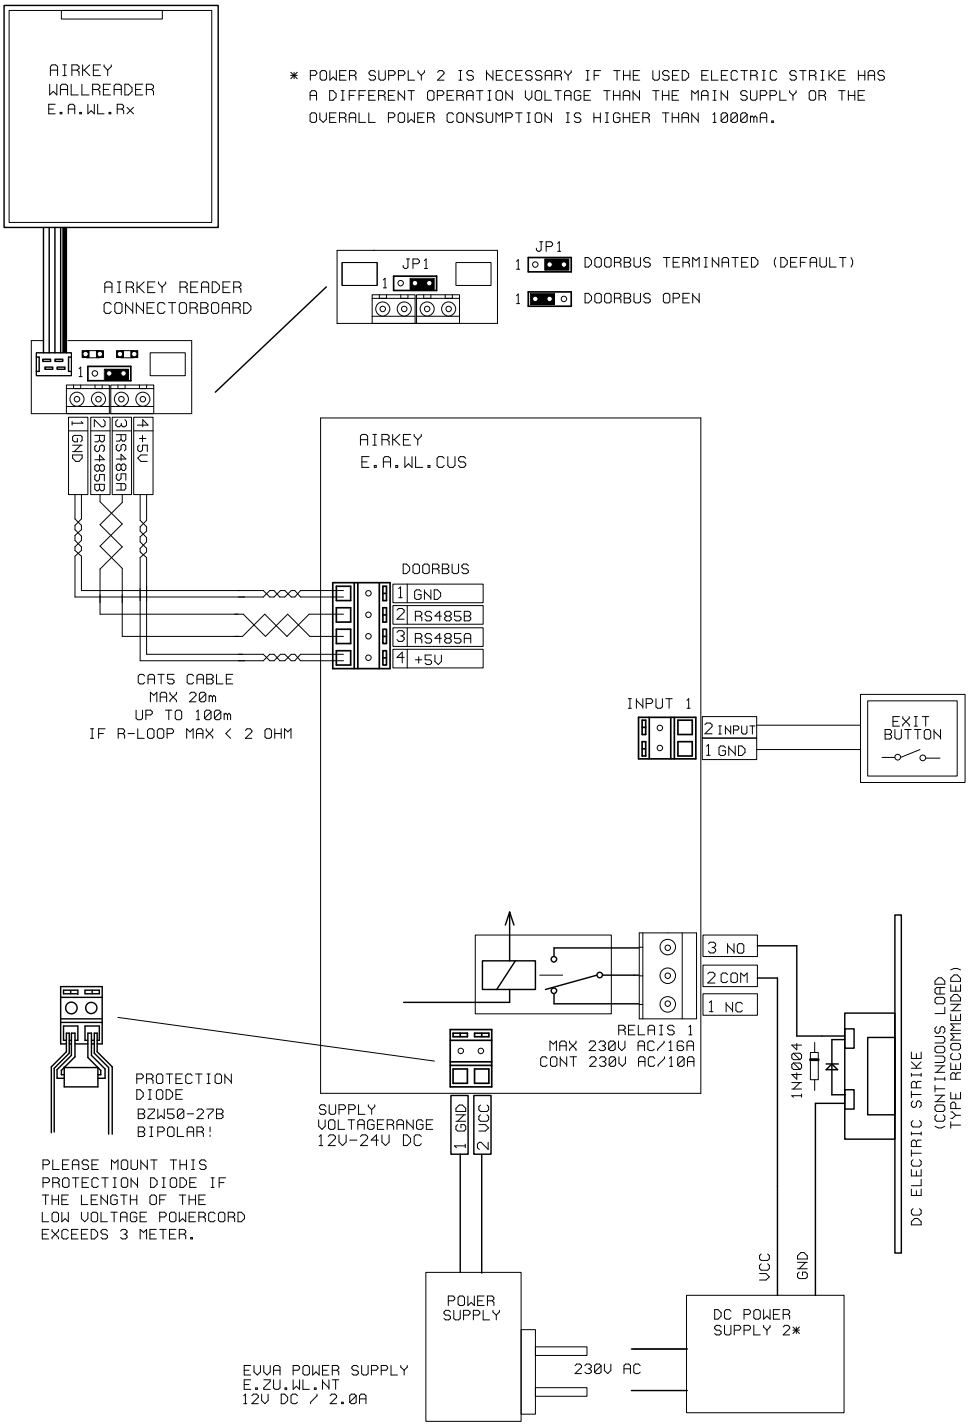

03 CONTROL UNIT WITH AC ELECTRIC STRIKE

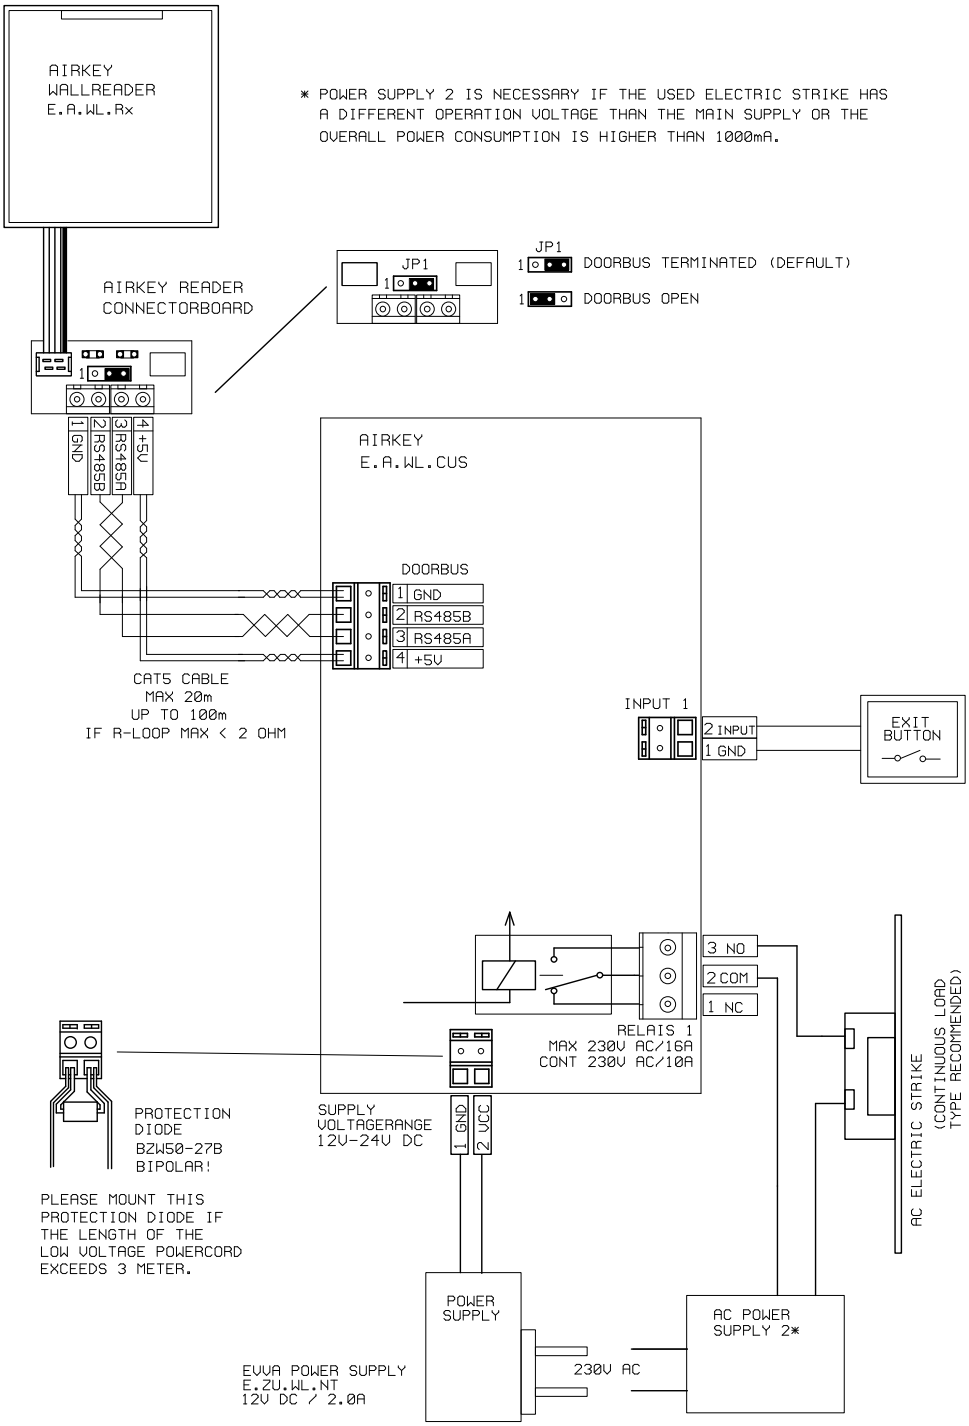

04 CONTROL UNIT WITH EXTERNAL DOOR CONTROL UNIT

